

# Instruction Manual


Please keep customer service email: [homephile@gmail.com](mailto:homephile@gmail.com)  
 We provide you with lifetime free service for products, and we are looking forward to your suggestions and needs very much to improve our quality and service!  
 After receiving your letter, we will give you a satisfactory reply within 24 hours!



- ◎FUNCTION and SPECIFICATION:
- 1.Standard display: hour, minute, second, month, day, week
  - 2.Alarm, hourly chime
  - 3.Screen protector and stainless steel back cover protector
  - 4.Stopwatch: Manage and record time, especially when doing sports activities
  5. 7 Colorful lighting function: Easily read the time at night

- ◎ BUTTON FUNCTIONS:
- L--LIGHT: light button
  - S--SELECT: Selecting button
  - R--REVERSE: Adjusting button
  - F--FORWARD: Shifting button
  - A--AM: Morning time(0:00-11:59)
  - P--PM: Afternoon time(12:00-11:59)
  - H--24 Hour mode(0:00-23:59)

☑ How to set time/date/week

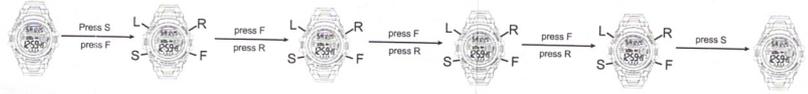

Begin with Time Display Mode:

Press S 3 times, then press F(once), hour will flash, press R to set hour  
 Then press F(once), minute will flash, press R to set minute  
 Then press F(once), month will flash, press R to set month  
 Then press F(once), day will flash, press R to set day  
 Then press F(once), week will flash, press R to set week  
 Press S once back to time display mode and the time setting is done.

☑ How to set alarm



Begin with Time Display Mode:

Press S twice, then press R(1-3 times), select ALM to activate the alarm function  
 Then press F once, hour will flash, press R to set hour  
 Next, press F once, minute will flash, press R to set minute  
 Press S once back to time display mode and alarm setting is done.

◎ Scan the QR code to get the operation video US



☑ How to turn on/off Alarm



**Begin with Time Display Mode:**

Press S twice, Then press R(1-3 times), select ALM that the alarm clock is on.  
Press S twice, Then press R(1-3 times), ALM not selected means the alarm clock is turned off.

☑ How to use Stopwatch

**Begin with Time Display Mode:**

Press S once, then press R once to start the stopwatch  
Then press R again to stop the stopwatch.  
You can press F once to reset the number to zero.  
Press S once back to time display mode.

☑ How to set 12/24 hour format :

**Begin with Time Display Mode:**

Press S 3 times, then press F once, hour will flash, press R for setting, A/P indicates 12-hour format (AM/PM), while H represents 24-hour mode. Continue to long press R to select the format, if AP does not appear, it indicates 24-hour format.

**ES** Escanee el código QR para ver el video de la operación



**DE** Scannen Sie den QR-Code, um das Betriebsvideo abzurufen



☑ How to choose the light colour:

Press L the Light button to turn on the light, Long press to switch the color.

☑ How to turn on/off hourly chime:

**Begin with Time Display Mode:**

Press S twice, Then press R(1-3 times), select SIG and SNZ that the hourly chime is on.  
Press S twice, Then press R(1-3 times), SIG and SNZ is not selected that the hourly chime is off.

○ **Maintenance instruction and notice:**

- This watch is 50M water resistant, available for swimming, hand washing, bathing, rainy day. But please don't press any button under water.
- Avoid wearing it in strong electric field, static, or high cycle environment.
- Keep it away from gasoline, detergent, spraying agent, adhesives and paint.
- Clean the watch surface with soft cloth and clear water. Don't use chemicals.

Wish you a happy shopping !

We provide you with a permanent free after-sales service of the watch! Please keep our mailaddress:

[homeophile@gmail.com](mailto:homeophile@gmail.com)

**FR** Scannez le code QR pour obtenir la vidéo de l'opération



**IT** Scansionate il codice QR per visualizzare il video aziendale

